

REPRODUCTION

READ TEST TAPE ROUTINE

A. PURPOSE:

TO PROVIDE A PROGRAM THAT WILL RUN CUSTOMER ENGINEERING TESTS FROM TAPE.

B. LOADING AND RUNNING PROCEDURES:

1. LOAD THE TAPE ON TAPE DRIVE 1. USE SAME DENSITY AS THAT IN WHICH TAPE WAS WRITTEN. TEST TAPES WRITTEN AT THE PLANT ARE WRITTEN IN LOW DENSITY 200 CHARACTERS PER INCH.
2. LOAD WORKING REEL ON TAPE DRIVE 4. USE HIGH DENSITY, 556 CHARACTERS PER INCH, FOR BLOCK NUMBER 5500 AND BLOCK NUMBER 5530. USE EITHER DENSITY FOR OTHER TESTS.
3. PRESS TAPE LOAD KEY- AFTER LOADING THE TEST TAPE ROUTINE, THE MACHINE PROCEEDS TO A STOP AT ADDRESS LOCATION 1369.
4. IF DESIRED, PUT A HALT, C B A 8 2 1 WM, IN S87 TO STOP THE TAPE AFTER TESTS HAVE RUN AND THE TAPE HAS REWOUND.
5. SET SENSE SWITCHES, ENTER SELECTION DIGITS AND CODES AS DESIRED. PUSH START. TO SIMPLIFY THE ENTERING OF SELECTION DIGITS, USE THE FOLLOWING PROCEDURE:

A. MANUALLY PUNCH A CARD WITH THE FOLLOWING INFORMATION.

1	2	3	4	5	6	7	8
1234567890	1234567890	1234567890	1234567890	1234567890	1234567890	1234567890	1234567890
,008015	,022026	M080S	808T69			XXXXXXXXXXXXXXXXXXXXXXXXXXXX	XXXXXXXXXXXX

SELECTION DIGITS  
CARD COLUMNS 51 THROUGH 80 CORRESPOND TO  
STORAGE LOCATIONS 1251 TO 1280.

- B. PUSH START RESET KEY AND LOAD THE PREPARED CARD. AFTER EXECUTING THE CARD THE FIRST TEST FROM TAPE WILL BE LOADED. KEEP THIS LOAD CARD. IT CAN BE USED EVERY TIME TESTS ARE RUN FROM TAPE.

DATE	2-2-61	5-15-62	6-29-63	17. 10. 63			
ENG. CHG. NO.	110378	115283	117628	TA 1976			

DIAGNOSTIC FUNCTION TEST

REPRODUCTION

6. RUNNING ONLY ONE TEST ASSOCIATED WITH A SPECIAL FEATURE, BY PASSING ALL OTHERS.

IT MAY BE DESIRABLE TO RUN ONLY ONE TEST ASSOCIATED WITH A SPECIAL FEATURE. THIS IS DONE BY COMPARING THE BLOCK NUMBER OF THE TEST, MANUALLY ENTERED IN S73 THROUGH S76, TO THE BLOCK NUMBER OF THE TEST AS IT IS READ IN FROM TAPE IN LOCATIONS O73 THROUGH O76. WITH SENSE SWITCH F ON, AN EQUAL COMPARE CAUSES THE TEST TO BE EXECUTED IF THE PROPER SELECTION DIGIT HAD BEEN PREVIOUSLY ENTERED IN STORAGE.

AFTER LOADING THE TEST TAPE ROUTINE, THE MACHINE STOPS.

1. ENTER SELECTION DIGIT, IF REQUIRED BY THE TEST.  
 EXAMPLE -- 1 IN S58 FOR DIVIDE.
2. ENTER BLOCK NUMBER IN S73 THROUGH S76.  
 EXAMPLE -- 3210 FOR DIVIDE.
3. SET SENSE SWITCH F ON.
4. PRESS START KEY.

NOTE: SETTING SENSE SWITCH F OFF CAUSES ALL EQUAL COMPARES TO BE BY PASSED. IN THE ABOVE EXAMPLE WITH SENSE SWITCH F OFF, THE DIVIDE TEST WILL BE BY PASSED. ALL TESTS NOT REQUIRING A SELECTION DIGIT WILL BE EXECUTED. ALL TESTS REQUIRING A SELECTION DIGIT AND FOR WHICH A SELECTION DIGIT HAS BEEN ENTERED WILL BE EXECUTED WITH THE ONE EXCEPTION OF DIVIDE.

NOTE ALSO, THAT WITH SENSE SWITCH F OFF AND NO BLOCK NUMBER IN S73 THROUGH S76, ALL TESTS NOT REQUIRING SELECTION DIGITS WILL BE EXECUTED BECAUSE OF THE UNEQUAL COMPARISON. AND ALL TESTS REQUIRING A SELECTION DIGIT AND FOR WHICH A SELECTION DIGIT HAS BEEN ENTERED, WILL BE EXECUTED.

FURTHER NOTE THAT, FOR TESTS REQUIRING A SELECTION DIGIT, THE ABSENCE OF THE SELECTION DIGIT CAUSES THE TESTS TO BE BY PASSED REGARDLESS OF THE SETTING OF SENSE SWITCH F.

7. RUNNING MULTIPLE TESTS ASSOCIATED WITH A SPECIAL FEATURE, BY PASSING ALL OTHERS.

IT MAY BE DESIRABLE AT TIMES TO RUN ONLY THOSE TESTS THAT ARE ASSOCIATED WITH A GIVEN SPECIAL FEATURE AND BY-PASS ALL OTHERS. THIS MAY BE DONE AS DESCRIBED IN THE FOLLOWING EXAMPLES BY COMPARING, FOR AN EQUAL CONDITION, ONLY THE TWO HIGH ORDER POSITIONS OF THE BLOCK NUMBERS IN O73 AND O74 TO THAT MANUALLY SET UP IN I273 AND I274. MANUALLY MODIFY THE TAPE READ ROUTINE IN STORAGE TO DO THIS.

COLUMN BINARY	MOVE AND BINARY DECODE	3000	1	IN S56
	MOVE AND BINARY CODE	3010	1	IN S56
	PUNCH COLUMN BINARY	3020	1	IN S56
	READ COLUMN BINARY	3030	1	IN S56
	BIT TEST	3040	1	IN S56
MULTIPLY-DIVIDE	MULTIPLY	3200	1	IN S58
	DIVIDE	3210	1	IN S58

DATE	2-2-61	5-15-62	6-29-63	17. 10. 63				
ENG. CHG. NO.	110378	115283	117628	TA 1976				

DIAGNOSTIC FUNCTION TEST  
REPRODUCTION

AFTER LOADING THE READ TEST TAPE ROUTINE, THE MACHINE STOPS.

1. CHANGE 6 TO 4 IN LOCATIONS 1341 AND 1344.
2. ENTER 1 IN LOCATION 1256 FOR COLUMN BINARY, OR 1 IN 1258 FOR MULTIPLY-DIVIDE.
3. ENTER THE TWO HIGH-ORDER POSITIONS OF BLOCK NUMBERS 30 FOR COLUMN BINARY, OR 32 FOR MULTIPLY-DIVIDE IN LOCATIONS 1273 AND 1274.
4. SET SENSE SWITCH F TO THE ON POSITION.
5. PRESS START KEY.

C. TEST PROCEDURE:

THIS ROUTINE MUST BE WRITTEN ON TAPE BY THE WRITE TEST TAPE ROUTINE. IT IS CHAINED TO THE WRITE ROUTINE. TEST DECKS TO BE WRITTEN ON TAPE ARE CHAINED BEHIND THE READ TEST TAPE ROUTINE.

BECAUSE THE READ TEST TAPE ROUTINE IS THE FIRST RECORD ON THE TEST TAPE, THE FIRST INSTRUCTION MUST BE IN 001. THIS POSITION IS ADDRESSED FIRST WHEN THE FIRST TAPE RECORD IS LOADED BY USE OF THE TAPE LOAD KEY.

THE WRITE TEST TAPE ROUTINE WILL HAVE TO CHANGE THE INFORMATION LEFT IN THE READ-IN AREA BY THE TRAILER CARD OF THE READ TEST TAPE ROUTINE. BUT BEFORE THIS OCCURS, THE TRAILER CARD MUST LOAD BS88 INTO 377 SO THAT WHEN THE READ TEST TAPE ROUTINE FIRST CALLS FOR THE EXECUTION OF A TEST AFTER A REWIND, THE PROGRAM WILL BRANCH TO S88 AND CALL FOR THE FIRST TEST TO BE READ. THE TRAILER CARD MUST DO ONE OTHER THING. IT MUST CAUSE A BRANCH TO THE WRITE TEST TAPE ROUTINE.

THE FIRST THING THAT THE WRITE TEST TAPE ROUTINE DOES IS TO CHANGE THE INSTRUCTION IN 001 TO A BRANCH TO T65. NEXT, THE RECORD IS WRITTEN ON TAPE. NOW, WHEN THE TEST TAPE IS LOADED INTO THE 1401, THE FIRST INSTRUCTION CAUSES A BRANCH TO T65, WHERE THE READ TEST TAPE ROUTINE STARTS.

D. STOPS:

1365 IN STORAGE ADDRESS REGISTER - HALT - ENTER SELECTION DIGIT.

DATE	2-2-61	5-15-62	6-29-63	17. 10. 63			
ENG. CHG. NO.	110378	115283	117628	TA 1976			

REPRODUCTION

READ TEST TAPE ROUTINE FLOW CHART

T65

STOP  
 (MANUALLY ENTER SELECTION  
 CODES AND BLOCK NO. IF  
 NECESSARY) PRESS START KEY

T98

SET WORD MARK  
 IN GROUP MARK  
 LOCATION

S88  
 CLEAR READ  
 AREA 000-  
 Q81

S96  
 READ  
 DR. 1

T16  
 READ  
 ERROR

T86  
 BKSP  
 DR. 1

T21  
 TM  
 EOR

S82  
 REWIND  
 DR. 1

S87  
 NOP/STOP

T26  
 TITLE  
 CARD

T38  
 COMPARE  
 BLOCK  
 NO

T45  
 SENSE


OFF

T50  
 BI #  
 UNEQ

T77  
 BI #  
 UNEQ

377  
 START TEST

(BY-PASS  
 SINGLE TEST)

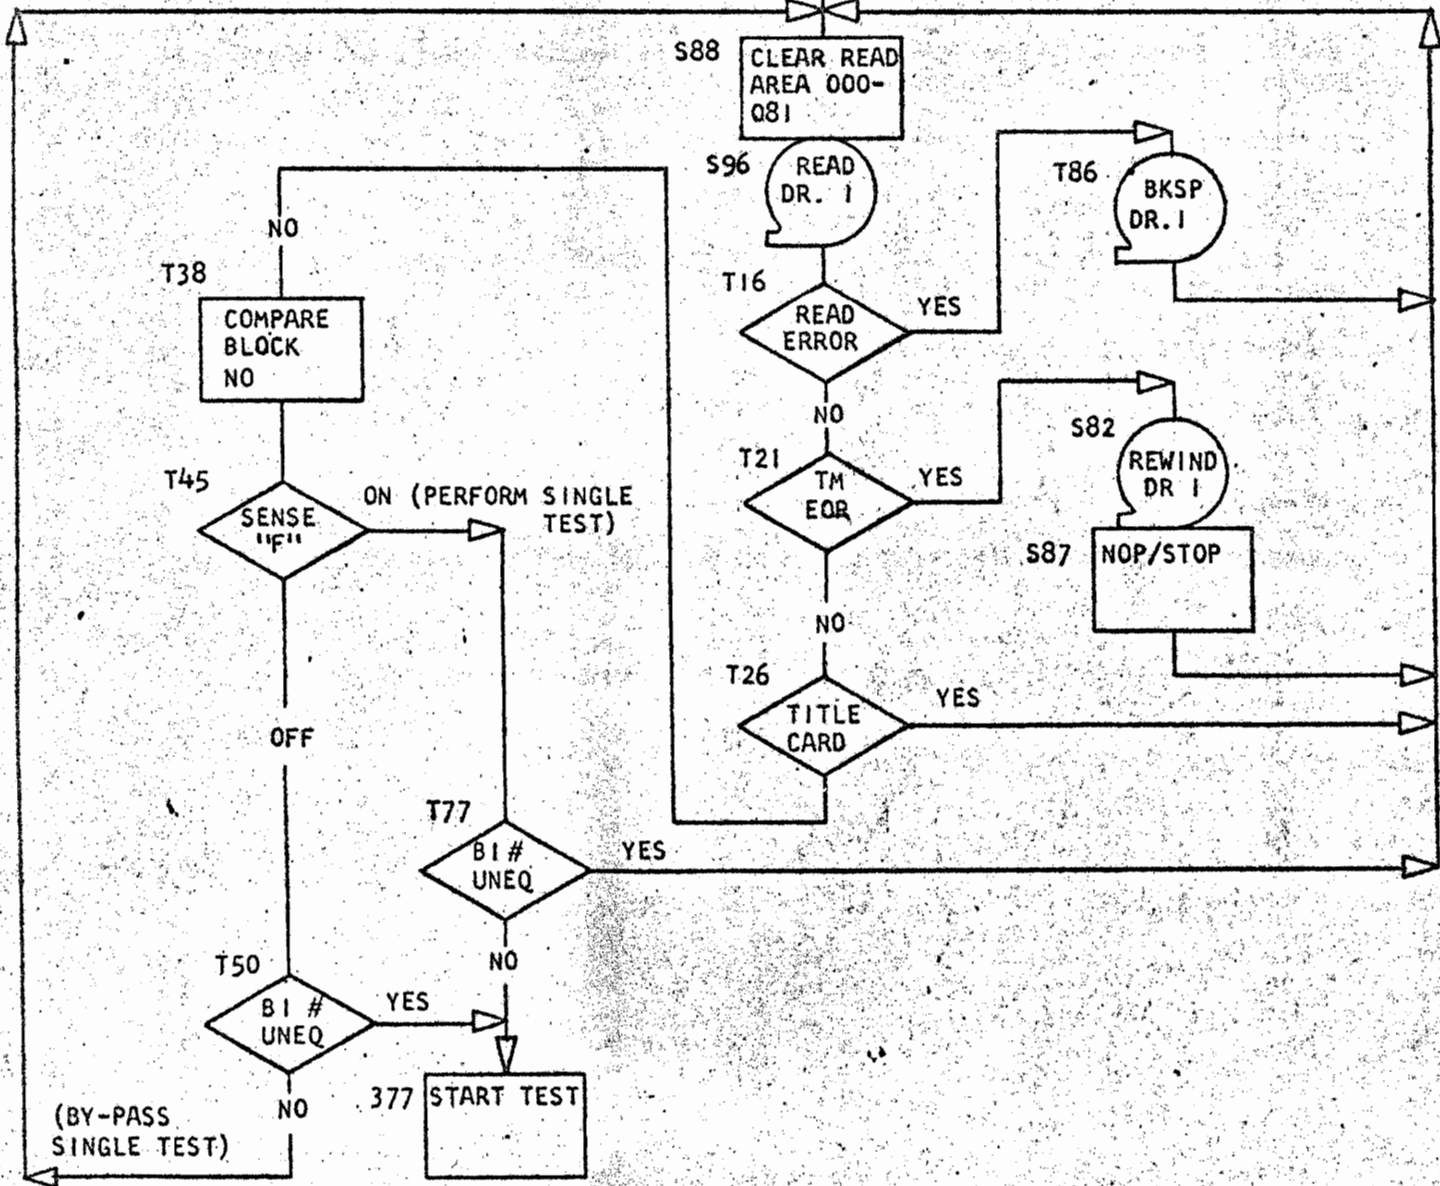

DATE	2-2-61	5-15-62	7-1-63	17. 10. 63			
ENG. CHG. NO.	110378	115283	117628	TA 1976			

REPRODUCTION

PROGRAM LISTING FOR USE WITH FLOW CHART

READ TEST TAPE ROUTINE 5310E

INSTRUCTION ADDRESS	OP	A	B	REMARKS
1282	S82	U	201 R	REWIND DRIVE 1
1287	S87	N		CHANGE TO . TO STOP BEFORE RERUN
1288	S88	✓	081	CLEAR GM-WM FROM 081
1292	S92	.	S51	SETUP MOVE FOR GROUP MARK
1296	S96	L	201 001R	READ RECORD
1304	T04	M	S51	SET 8-STAR TO END OF RECORD PLUS ONE
1308	T08	L	T98	LOAD GM-WM IN HIGHEST READ ADDR. PLUS 1
1312	T12	□	S51	
1316	T16	B	T06 L	BRANCH IF READ ERROR
1321	T21	B	S82 K	BRANCH IF END OF REEL
1326	T26	B	S88 080A	BRANCH TO READ NEXT RECORD IF TITLE
1334	T34	.	S73	SET WORD MARK IN BLOCK NUMBER
1338	T38	C	076 S76	COMPARE BLOCK NUMBERS
1346	T46	B	T77 F	F ON - PERFORM ONLY IF COMPARISON EQUAL
1350	T50	B	377 /	GO PERFORM TEST
1356	T56	B	S88	BYPASS TEST WITH BLOCK NO. IN S73-S76
1366	T66	.	T69	STOP TO ENTER BL NO. + SELECTION CODES
1369	T69	.	T98	SET WORD MARK IN GROUP MARK LOCATION
1373	T73	B	S88	GO READ RECORD
1377	T77	B	S88 /	GO READ RECORD
1382	T82	B	377	PERFORM TEST WITH BLOCK NO. IN S73-S76
1384	T86	U	201 B	BACKSPACE TO RE-READ
1391	T91	B	S88	GO RE-READ
1398	T98			GROUP MARK IN T98
377	377	B	S88	SETUP READ FOR FIRST TEST

DATE	2-2-61	5-15-62	7-1-63	17. 10. 63				
ENG. CHG. NO.	110378	115283	117628	TA 1976				

DIAGNOSTIC FUNCTION TEST

PART NO. 451459  
 SHEET 6 OF 6  
 BLOCK NO. 5310E

REPRODUCTION

TABLE OF UNPRINTABLE CHARACTERS

LP-LEFT PARENTHESIS	12 5 8	SE-SEMICOLON	11 6 8	DE-DELTA	11 7 8
WS-WORD SEPARATOR	0 5 8	LT-LESS THAN	12 6 8	PZ-PLUS ZERO	12 0
TS-TAPE SEGMENT MARK	0 7 8	GT-GREATER THAN	6 8	TM-TAPE MARK	7 8
GM-GROUP MARK	12 7 8	MZ-MINUS ZERO	11 0	CO-COLON	5 8
RP-RIGHT PARENTHESIS	11 5 8	AP-APOSTROPHE	0 6 8		

#012012;015022,029033N	1001	READ TEST TAPE ROUTINE	5310E00A
L058T07,587588,S92S96,T04T081001UZU1RN/081,551LXU1001RMS51			5310E 02
L069T44;T12T16,T21T26,T34T381001LT98MS51BT86LBS82KBS88080A,S73C076S76			5310E 03
L069T81,T50T55,T65T69,T73T771001BT77FB377/BS88			5310E 04
L049T98;T86T91,T95T98,T98T981001B377UZU1BBS88		G	5310E 05
		M	
8008	L0373818V09	BS88	READ TEST TAPE ROUTINE 5310E 06

DATE	2-2-61	5-15-62	7-1-63	17. 10. 63			
ENG. CHG. NO.	110378	115283	117628	TA 1976			