



View of Pin Side of TAU Connector (Wire side of our shoe)

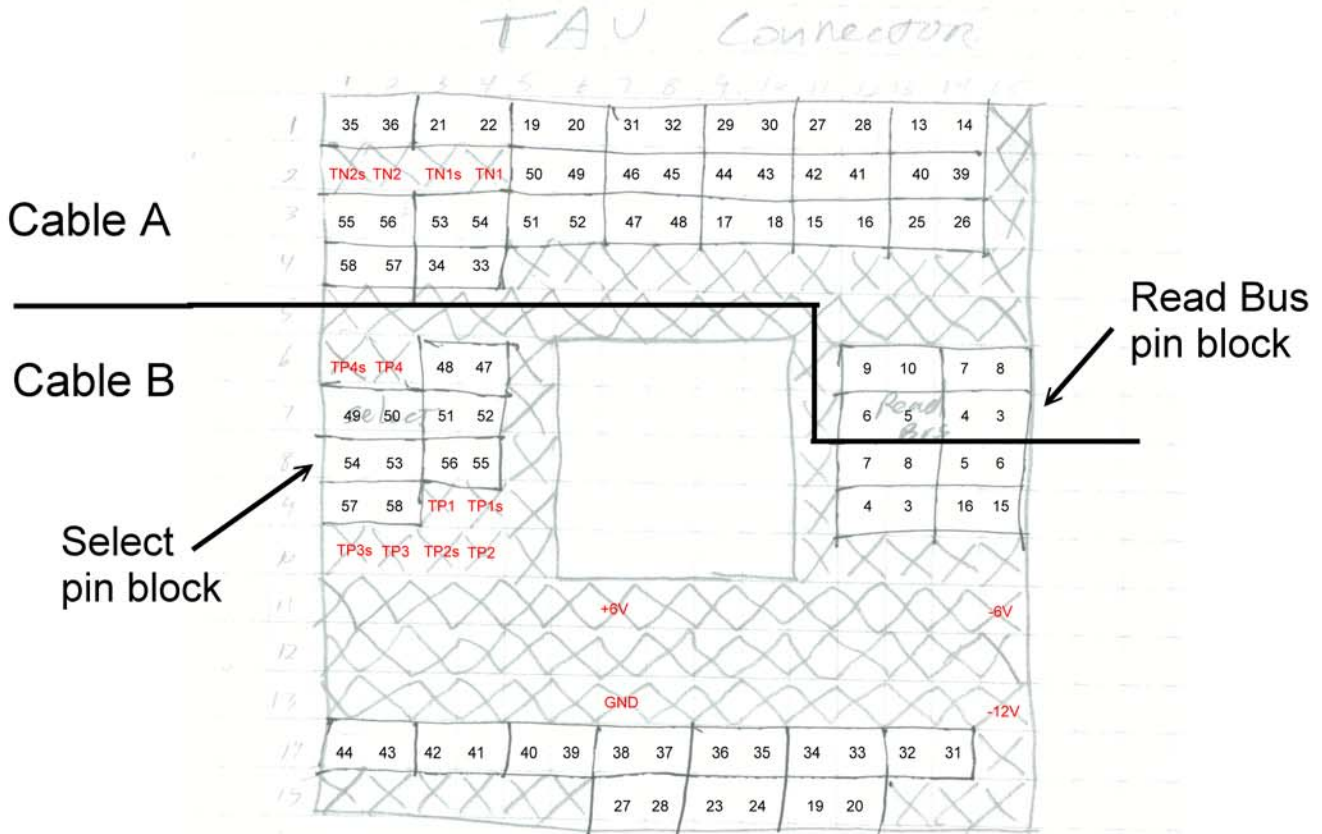

All even numbered pins are shields.

X = NO PIN STUFFED

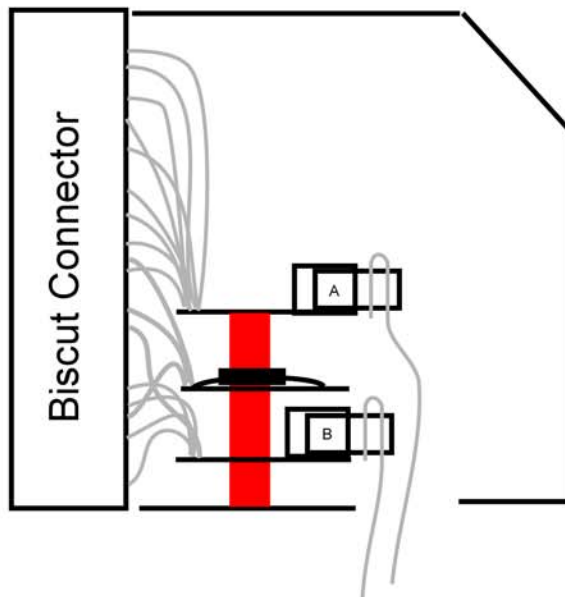

Two PCBs with rt angle 60-pin connectors. These boards are mounted (using spacers) on a third board that is anchored in shoe's slot.